

RAYMOND WEIL

GENEVE

RAYMOND WEIL S.A.
Avenue Eugène-Lance 36-38
P.O. Box 1569
1211 Geneva 26
Switzerland
Tel: +41 (0) 22 884 00 55
Fax: +41 (0) 22 884 00 50



GENERAL INFORMATION
info@raymond-weil.ch

AFTER SALES SERVICE
customer-service@raymond-weil.ch

WEBSITE
www.raymondweil.com

INSTRUCTIONS FOR USE

SELF-WINDING MECHANICAL WATCHES



INTRODUCTION

We congratulate you on having chosen a watch from the prestigious RAYMOND WEIL collection, the living expression of masterful design and of the continuous quest for top quality, which have been the hallmarks of the Brand since its creation.

Your automatic RAYMOND WEIL watch has a power reserve ranging from minimum 38 to 42 hours depending on the model. If your watch has stopped, turn the crown about 20 times to rewind the movement manually. Afterwards, the natural movements of your wrist will be enough to ensure your watch remains fully wound.

For models with a power-reserve indicator, the counter enables you to check the remaining operating autonomy at any moment before your watch stops, when not being worn. The watch must therefore be rewound before the indicator reaches its minimum. When the mechanism is fully wound, the indicator is at its maximum position.

In order to guarantee the perfect functioning of your RAYMOND WEIL watch for many long years, we thank you to pay close attention to the advice contained in these Instructions for Use as well as in the International Guarantee booklet.

CHANGING THE DATE, THE DAY AND SETTING THE TIME



- 1 Normal or winding position
- 2 Rapid date and day change
- 3 Time-setting

Your RAYMOND WEIL watch may be fitted with a screw-down crown. Before setting the time or changing the date or the day of the week, it is therefore necessary to unscrew the crown by turning it anti-clockwise. The crown will then be released by a spring. After completing all settings, press lightly on the crown, while turning it clockwise, and screw it back in gently in order to preserve your watch's water-resistance.

CHANGING THE DATE AND THE DAY (applicable only for watches with date or day and date indication)

In order to adjust the date rapidly, pull the crown out to position 2. Then, depending on the model of your watch, turn the crown forwards or backwards until the desired date appears in the window. The date changes as the hour hand passes midnight. During this operation, your watch will continue to function and so will not need to be reset.

Do not change the date when the watch is showing a time between 10 pm and 2 am. The watch's automatic date change mechanism engages during this time period and the movement could be damaged.

For models with a day of the week indicator, pull the crown out to position 2 and turn it clockwise in order to adjust the date, and anti-clockwise to adjust the day.

After finishing your changes, always push the crown back in to position 1, in order to preserve your watch's water-resistance.

SETTING THE TIME

In order to adjust the time, pull the crown out to position 3 and turn it forwards or backwards until the hands indicate the desired time.

After setting the time, always push the crown back in to position 1, in order to restart the hands and to preserve your watch's water-resistance.


NABUCCO GMT

DESCRIPTION OF THE DIAL



The **Nabucco** GMT bezel is marked with a 24 hour scale. This enables a second time zone display which can be read from the 24 hour hand.

CHANGING THE DATE AND SETTING THE TIME

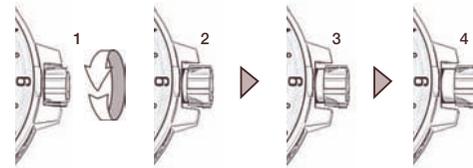

- 1 Screw-down crown
- 2 Manual winding
- 3 Quick date and 24 hour hand adjustment
- 4 Time setting

Your RAYMOND WEIL Nabucco watch is fitted with a screw-down crown. Before winding or adjusting the watch, it is therefore necessary to unscrew the crown by turning it anti-clockwise. The crown will then be released by a spring.

After adjusting settings, press the crown and gently turn it clockwise, and then screw it carefully down to maintain your watch's water-resistance.

CHANGING THE DATE

To change the date quickly, pull the crown out to position 3. Then turn the crown towards you, anti-clockwise, until the desired date appears in the window. Automatic date change occurs daily when the hour hand passes midnight. Your watch continues to operate during this process and therefore the time does not have to be reset.

Never change the date when the watch indicates a time between 22.00 and 02.00. The automatic date change mechanism operates during this period and any manual procedure could damage the movement.

After any date adjustment, always return the crown to position 2, and then screw down the push-button securely to maintain your watch's water-resistance.

SETTING THE TIME

To set the time, pull the crown out to position 4 and turn it forwards or backwards until the hands indicate the exact time.

After setting the time, always return the crown to position 2 to restart the hands, and then screw the crown down carefully to maintain your watch's water-resistance.

GMT FUNCTION

To adjust the 24 hour hand (or the second time zone hand), pull the crown out to position 3 and turn it away from you, clockwise, until the hand indicates the exact time at your destination or your home. Your watch continues to operate during this process and therefore the time does not have to be reset.

After setting the time, always return the crown to position 2, and then screw the crown down carefully to maintain your watch's water-resistance.

In the example below, the main time (22.07) corresponds to Geneva time, and the GMT hand (06.07) shows the time in Sydney. The map on pages 126 and 127 will familiarise you with the time zones.

