

CARE AND MAINTENANCE

Your watch has been developed with meticulous attention to quality, function and detail. Please read the following information and instructions carefully to learn about the features, proper care and operation of your new timepiece.

For additional information on service and repairs, please see your Warranty & Service Guide booklet – or return to our service website home page and click on the Warranty and Service Information link.

Shock

All our watches have shock-resistant movements and are tested to meet international standards for shock resistance.

Magnetism

The exposure of a timepiece to a strong magnetic field will affect its time-keeping, and may cause it to stop. A quartz watch should resume working with its original accuracy when removed from the magnetic field; an automatic or hand-wound mechanical timepiece, however, may require demagnetization before it will operate again.

Water Resistance

All our watches meet international standards for water resistance to at least 3ATM / 30M / 99 feet, so faucet spray or rain won't hurt them as long as the case, crown and crystal remain intact.

Timepieces marked water resistant to 50M / 5 ATM / 165 feet may be worn while showering or swimming, but not scuba diving.

CAUTION: Do not press the push-buttons on a chronograph model when the watch is under water, or it will not remain water resistant.

NOTES: We recommend that you do not get your leather strap wet. Exposing leather to water can cause premature wear and deterioration.

Carefully wipe your watch using a soft cloth dampened with fresh water after exposure to chlorine or sea water.

Battery Information

Your quartz analog watch or chronograph has a battery specially designed for watches. It will last approximately 18-36 months under normal use.

NOTE: Frequent use of special functions, like the stopwatch timer on chronograph models, may shorten battery life.

End-of-life feature: The seconds hand on many models will start to move haltingly in 4-second increments when the battery is almost exhausted, signaling the need to have it replaced.

Battery replacement: Take or send your watch to an Authorized Service Center to have battery changed – your old battery will be disposed of/recycled properly. Do not attempt to change the battery yourself.

Warranty and Service Information

Please see the printed warranty and service guide enclosed with your watch for complete warranty and service information – or return to our service website home page and click on the Warranty and Service Information link.